



optiPoint 150 S

User Manual

SIEMENS

Global network of innovation

Safety Precautions

For Your Safety

The optiPoint 150 S IP phone conforms to the European standard EN 60950 which governs the safety of information technology equipment including electronic office equipment. This device has been designed with safety in mind, thus protecting both individuals and objects.

There is always the danger of small objects being swallowed by young children. In the case of optiPoint 150 S, this applies in particular to the connecting cord clip.

Please make sure that such items are not accessible to children.

- Use only the enclosed power supply together with the special LAN cable.
- Never open the power supply enclosure.

Protecting Your Telephone

- The telephone must not be used in bathrooms, etc. as it is not splash-proof.
- Before connecting or disconnecting the LAN cable, disconnect the power plug from the wall outlet first.
- Never allow the device to come into contact with staining or aggressive liquids, such as, coffee, tea, juice, or soft drinks.

Choosing the Installation Location

- The telephone should be operated in a controlled environment with an ambient temperature between 5°C and 40°C (41°F and 104°F).
- To ensure good handsfree talking quality, the area in front of the microphone (front right) should be kept clear. The optimum handsfree distance is 20 inches (50 cm).
- Do not install the telephone in a room where large quantities of dust accumulate; this can considerably reduce the service life of the telephone.
- Do not expose the telephone to direct sunlight or any other source of heat, as this is liable to damage the electronic equipment and the plastic casing.
- Do not operate the telephone in damp environments such as bathrooms.

Important Information

	Do not operate the telephone in environments where there is a danger of explosions.
	Use only original Siemens accessories. The use of other accessories is dangerous and will invalidate the warranty and the CE mark.
	Never open the telephone or a key module. In the event of problems, consult your service personnel.

The information provided in this document contains merely general descriptions or characteristics of performance which in case of actual use do not always apply as described or which may change as a result of further development of the products. An obligation to provide the respective characteristics shall only exist if expressly agreed in the terms of contract.

The trademarks used are owned by Siemens AG or their respective owners.

Marks



The device conforms to the EU directive 1999/5/EC, as attested by the CE marking.



This device has been manufactured in accordance with a certified environmental management system (ISO 14001). This process ensures that energy consumption and the use of primary raw materials are kept to a minimum, thus reducing waste production.



All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For detailed information about disposal of your old appliance, please contact your city office, waste disposal service, the shop where you purchased the product or your sales representative.

The statements quoted above are only fully valid for equipment which is installed and sold in the countries of the European Union and is covered by the directive 2002/96/EC. Countries outside the European Union may have other regulations regarding the disposal of electrical and electronic equipment.

Contents

Safety Precautions. 2

For Your Safety 2

Protecting Your Telephone 2

Choosing the Installation Location. 2

Important Information 3

Marks 3

General Information. 7

About These Operating Instructions 7

Intended Use. 7

Product Identification. 7

Echo Effect 8

Service. 8

Information and Icons 8

 Safety. 8

Availability of Features 9

Reference to Operating Steps. 9

Control Elements 10

Making Calls – Basic Functions 11

Accepting Calls 11

 Answering a Call Using the Handset 11

 Open Listening in the Room During a Call. 11

 Deactivating the Microphone 11

Dialing/Making Calls 12

 Dialing a Number 12

 Redialing a Number 13

Ending a Call 13

Telephone Settings 14

 Adjusting the Ringer Volume 14

 Adjusting the Handset Volume 14

 Adjusting the Speaker Volume 14

Making Calls – Enhanced Functions 15

Accepting Calls 15

 Call Waiting 15

Dialing/Making Calls 16

 Using the Call Log 16

 Dialing from the Phone Book 17

During a Call 18

 3-Way Conference 18

 Call Transfer 18

Editing the Phone Book 20

 Adding an Entry to a Phone Book 20

 Editing a Telephone Book Entry 21

 Deleting a Phone Book Entry 22

 Deleting all Phone Book Entries 22

Using the Call Log 23

 Displaying Missed Calls 23

 Displaying Received Calls 23

 Displaying Dialed Numbers 24

 Dialing a Phone Number from the Call Log 24

 Transferring a Phone Number to the Phone Book 25

 Deleting a Phone Number from the Call Log 25

 Deleting Entries in All Call Logs 26

Accessing the Voice Mail 26

Configuration 27

Configuring Call Forwarding 27

 Activating and Deactivating Forwarding 27

 Configuring Forwarding Destinations 28

Activating and Deactivating Don't Disturb 28

Configuring Properties 29

 Configuring the Date Format 29

 Configuring the Time Format 30

 Setting a Language 30

 Setting a Country 31

 Setting the Ringer 31

 Configuring Voice Mail 32

Displaying the Current Status 32

Web-Based Management Tool 34

General Information. 34

Preparatory Steps 35

 Opening the Home Page 35

 User Setup Dialog 36

Structure 36

 Information. 36

 User Setup. 37

 Utilities. 38

Parameter Description 40

Documentation 47

Fixing Problems 48

Caring for Your Telephone 48

Troubleshooting. 48

Display Messages 49

 System Start 49

 Software Upgrade 49

 Forwarding. 49

 Idle Mode. 50

 During a Call. 50

 On Busy. 50

 Character Input 51

Contacts in the Case of Problems. 52

Index. 53

Menu Functions 56

RFC Standards. 57

General Information

About These Operating Instructions

These operating instructions will help you get to know the optiPoint 150 S and use its functions. The instructions contain important information for safe and proper operation of the optiPoint 150 S. Follow them carefully to avoid improper operation and get the most out of your multi-function telephone in a network environment.

Everybody involved in installing, operating or programming the optiPoint 150 S must read these operating instructions.



For your own protection, please carefully read the section on safety. Follow the safety instructions carefully in order to avoid endangering yourself or other persons and to prevent damage to the unit.

The layout of this operating manual is extremely user-friendly. You will be guided through operation of the optiPoint 150 S step by step – starting with a description of simple basic functions, through configuration of all operating parameters to a description of the additional features.

You can configure the telephone in two ways:

- locally at the telephone, see → page 27
- via remote maintenance over LAN, see → page 34

Administrative tasks are described in a separate manual. The quick reference guide is meant to give you quick and reliable explanations regarding frequently used functions.

Intended Use

The optiPoint 150 S telephone is a desktop unit designed for voice transmission and for connection to a LAN. It can be operated also as a stand-alone unit. Any other use is regarded as not prescribed.

Product Identification

The properties of the telephone – exact product name and serial number – are displayed on the nameplate on the underside of the telephone. Please have these at hand when you contact our Service department regarding problems or defects on the unit itself.

Echo Effect

In some cases, while using the telephone you may hear an echo, which can be quite strong. This is not due to any design defect or other fault with your IP telephone, but is caused by the other client. For example, if the echo occurs during a teleconference, it may be that the speakers and microphones need to be repositioned.

Service

 The Siemens Service department can only help you with problems or defects on the unit itself.
Should you have any questions regarding the operation, your specialist retailer or network administrator will gladly help you.
For any questions regarding the telephone connection, please contact your network provider.

In the event of any trouble or defects on the unit itself, please dial the service number for your country.

Information and Icons

Safety

Information regarding the prevention of injury or damage is highlighted, as it contains important instructions on how to use the unit correctly.

 This symbol indicates a hazard. Failure to follow the instructions given may result in injury or in damage to the unit.

 Key information important for the proper use of the telephone

Availability of Features

Your optiPoint 150 S can be operated on the following communication platforms:

- HiPath 2000
- HiPath 3000
- HiPath 4000
- HiPath 5000
- HiPath 8000
- Broadsoft
- Sylantro

General feature availability cannot be guaranteed for the communication platforms listed above. A number of the functions described here may not be available or may be restricted in scope depending on the communication platform used. Contact the service personnel for information on the features available on your communication platform or refer to the relevant platform documentation.

As a rule, optiPoint 150 S can also operate at a DSL router in connection with offerings from other VoIP providers. However, the feature scope described in this operating manual cannot be guaranteed in this case by the telephone's manufacturer. Even though optiPoint 150 S is fully compatible with general SIP standards, some of the functions described here may not be supported in view of the varying range of functions available from other VoIP providers and the number different network configurations implemented. An overview of RFC standards that are compatible with optiPoint 150 S is provided at the back of this manual, see → page 57.

Reference to Operating Steps

The following icons are used to indicate the various operating steps:



Operation on the optiPoint 150 S, see → page 27.




Operation via the Web-based Management Tool, see → page 34.

Control Elements



function keys

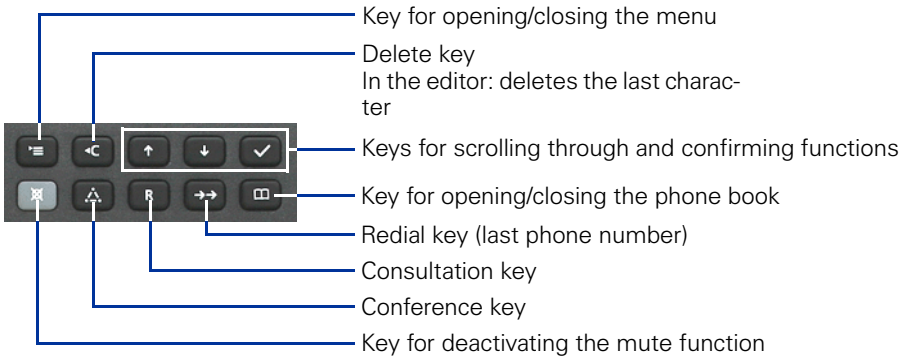

Step by Step

Making Calls – Basic Functions

Accepting Calls

Answering a Call Using the Handset

The telephone rings. The caller's number is displayed.

The caller's name is also displayed if it is stored in the phone book.



Lift the handset.

Open Listening in the Room During a Call




You are conducting a call.



Press this key. The (red) LED lights up. The call is switched to loudspeaker.



Inform the party at the other end of the line that you are switching to loudspeaker.



or

Adjust the volume. To raise or lower the volume, keep pressing the keys until the desired volume is set.

For an alternative method of adjusting the loudspeaker's receiving volume, see → page 43.

Deactivating the loudspeaker



Press this key. The (red) LED goes out.

Deactivating the Microphone



You are conducting a call.



Press this key. The (red) LED lights up. The microphone is deactivated.

Activating the microphone



Press this key. The (red) LED goes out. The microphone is activated.

Step by Step

Dialing/Making Calls

Dialing a Number

Off-hook dialing



Lift the handset.



Enter the phone number.

if necessary 

Press this key to delete the last digit.

or 

Press this key. The number is dialed.

or

Wait for dialing to start automatically.

C	a	l	l	i	n	g	...								
P	e	t	e	r		N	o	r	t	o	n				

If the phone number is stored in the phone book, the corresponding name is displayed on the second line.

On-hook dialing



Enter the phone number.

if necessary 

Press this key to delete the last digit.



Lift the handset. The number is dialed.

C	a	l	l	i	n	g	...								
P	e	t	e	r		N	o	r	t	o	n				

If the phone number is stored in the phone book, the corresponding name is displayed on the second line.

Step by Step

Redialing a Number

Off-hook dialing



Lift the handset.



Press this key to dial the last number dialed. The number is immediately dialed.

On-hook dialing



Press this key to display the last number dialed.



Lift the handset. The number is dialed.

Ending a Call



Replace the handset.

Step by Step

Telephone Settings

Adjusting the Ringer Volume

For a detailed explanation, see → page 45.

Press one of these keys while the phone is idle.

Press  or  until you have set the volume you require.

The setting is automatically saved.




Adjusting the Handset Volume

For a detailed explanation, see → page 42.

Press one of the keys while the handset is off hook.

Press  or  until you have set the volume you require.

The setting is automatically saved.



Adjusting the Speaker Volume

For a detailed explanation, see → page 43.

Press one of the keys while the loudspeaker is active (for example, in open listening mode during a call).

Press  or  until you have set the volume you require.

The setting is automatically saved.



Step by Step

Making Calls – Enhanced Functions

Accepting Calls

Call Waiting

 The "Call Waiting" feature must be activated, see → page 41.

Prerequisite: You are conducting a call and hear a tone.

Ending the first call and answering the waiting call:



Replace the handset. Your telephone rings.



Answer the second call. Lift the handset.

Placing the first call on hold and answering the second call

3	2	3	4	9	3	4	0								
A	n	s	w	e	r			C	a	l	l	?			

if necessary 

Press  or  to accept the waiting call. The first call is placed on hold.

Press this key to switch or toggle between the two callers.

Step by Step

1	3	:	5	5				2	8	.	1	0	.	0	5
2															

0	2	:						K	a	r	l			M	a	y	e	r		
0	8	:	0	4										0	2	.	1	4	.	



or

0	2	:						K	a	r	l			M	a	y	e	r		
0	8	:	0	4										0	2	.	1	4	.	



Dialing/Making Calls

Using the Call Log

Calling back a missed call

Any missed calls are displayed on the second line of the display when the telephone is idle.

Press or to select the missed call you want to call back.

Lift the handset. The number is dialed.

You can select extra options if you access the call logs → page 23.

Redialing a previously dialed number

Prerequisite: Only possible when there are no missed calls.

Press this key to display a list of the last numbers dialed.

Press or to select the number you want to redial.

Lift the handset. The number is dialed.

You can select extra options if you access the call logs → page 24.

Step by Step

Dialing from the Phone Book

Prerequisite: The phone book must contain entries, see → page 20.

Off-Hook Dialing



Press this key.

A	d	a	m		G	r	e	e	n										
2	2	9	3	0	9	4	4	5											

Press to select the number you want to call. The name is displayed on the first line and the phone number on the second.



Press the digit keys to enter the first letters of the subscriber's name. For more information on character input, see → page 51.

P	e	t	e	r		J	o	h	n	s	o	n							
2	8	8	3	0	4	2	8	3											

Press to confirm your selection. The number is dialed.

On-Hook Dialing



Press this key.

A	d	a	m		G	r	e	e	n										
2	2	9	3	0	9	4	4	5											

Press to select the number you want to call. The name is displayed on the first line and the phone number on the second.



Press the digit keys to enter the first letters of the subscriber's name. For more information on character input, see → page 51.



Lift the handset. The number is dialed.

Step by Step

 Dial Number

3	2	3	4	9	3	4	0	_				
---	---	---	---	---	---	---	---	---	--	--	--	--

3 2 3 4 9 3 4
C o n f e r e n c e 0 5 : 0

Dial Number

3	2	3	4	9	3	4	0	_				
---	---	---	---	---	---	---	---	---	--	--	--	--



During a Call

3-Way Conference



 The "3-Way Conference" feature must be activated, see → page 40.

In a conference call, you can talk to as many as two other parties at the same time.

Prerequisite: You are conducting a call.

Press this key.

Dial the number of the other conference participant. Announce the conference.

Press this key. You are connected to both subscribers.

Press  to scroll through the list of participants. The subscribers and the time they joined the conference are shown on the display.

Call Transfer



 The "Call Transfer" feature must be activated, see → page 41.

If the person you are speaking to wants to talk to another colleague of yours, you can transfer the call that colleague.

Quick Transfer (Unscreened Transfer)

Prerequisite: You are conducting a call.

Press this key.

Enter the other subscriber's number.

Replace the handset. The call is transferred.

If the other subscriber is busy or does not answer, your telephone is called back after a certain interval. When you lift the receiver, you are reconnected to the party on hold.

Step by Step

D i a l			N u m b e r								
3	2	3	4	9	3	4	0	_			



Screened transfer

Prerequisite: You are conducting a call.

Press this key.

Enter the other subscriber's number.

Announce the call.

Replace the handset. The call is transferred.

Step by Step

Editing the Phone Book

You can save, edit, and delete names and telephone numbers in a phone book. You can also transfer phone numbers from call logs → page 25.

Adding an Entry to a Phone Book



Press this key.

N	O	E	N	T	R	I	E	S							
C	R	E	A	T	E	E	N	T	R	Y	?				

If there are no entries, press to confirm your selection.

or

A	d	a	m		G	r	e	e	n						
2	2	9	3	0	9	4	4	5							

The first entry (name and phone number) is displayed. Press to confirm your selection.

P	h	o	n	e		B	o	o	k						
1	.	N	e	w		E	n	t	r	y					

Press to confirm your selection.

N	a	m	e	:											
P	e	t	e	r	_										

Enter the name. For more information on character input, see → page 51.
Press to confirm your selection.

N	u	m	b	e	r	:									
2	8	8	3	0	4	_									

Enter the phone number. Press to confirm your selection.

P	e	t	e	r		J	o	h	n	s	e	n			
S	a	v	e	d											

The entry is saved in the phone book.

Step by Step


Editing a Telephone Book Entry



Press this key.

A	d	a	m		G	r	e	e	n										
2	2	9	3	0	9	4	4	5											

The first entry (name and phone number) is displayed.



Press these keys to scroll through the phone book list.



Press the digit keys to enter the first letters of the subscriber's name. For more information on character input, see → page 51.

P	e	t	e	r		J	o	h	n	s	o	n							
2	8	8	3	0	4	2	8	3											

The entry you want to delete is displayed.

Press to confirm your selection.

P	h	o	n	e		B	o	o	k										
2	.	E	d	i	t		E	n	t	r	y								

Use to scroll to the function displayed and press to confirm it.

N	a	m	e	:															
P	e	t	e	r		J	e	f	f	e	r	s	o	n					

Edit the name. For more information on character input, see → page 51.

Press to confirm your selection.

N	u	m	b	e	r	:													
2	8	8	3	0	3	4	0	_											

Edit the phone number. Press to confirm your selection.


P	e	t	e	r		J	e	f	f	e	r	s	o	n					
S	a	v	e	d															

Your changes to the phone book entry are saved.

Step by Step

Adam Green

229309445



Peter Johnson

288304283

Phone Book

3.Delete Entry

Delete

OK?

Deleting a Phone Book Entry

Press this key.

The first entry (name and phone number) is displayed.

Press these keys to scroll through the phone book list.

Press the digit keys to enter the first letters of the subscriber's name. For more information on character input, see → page 51.

The entry you want to delete is displayed.

Press to confirm your selection.

Use to scroll to a function and press to confirm it.

Press to confirm your selection. The phone book entry is permanently deleted.

Deleting all Phone Book Entries

This function permanently deletes all phone book entries.

Adam Green

229309445

Phone Book

4.Delete All

Delete

OK?

Press this key.

The first entry (name and phone number) is displayed.

Press to confirm your selection.

Use to scroll to a function and press to confirm it.

Press to confirm your selection. All phone book entries are permanently deleted.

Step by Step

Using the Call Log

All calls are recorded in call logs. The following call types are saved in different call logs:

- missed calls (not received)
- received calls
- dialed numbers

 You can also edit call log entries via the Web-Based Management tool, see → page 41.

Displaying Missed Calls



M	a	i	n		M	e	n	u											
1	.	C	a	l	l		L	o	g										

Press this key.

Press  to confirm your selection.

C	a	l	l		L	o	g												
1	.	M	i	s	s	e	d												

Press  to confirm your selection.

0	2	=	2	2	2	8	7	5	8	8									
1	:	0	:	0	4						2	8	.	1	0	.			

If several entries are available, press  to select the required entry. The caller's phone number is displayed on the first line; the time and the date of the missed call is displayed on the second line.

Displaying Received Calls



M	a	i	n		M	e	n	u											
1	.	C	a	l	l		L	o	g										

Press this key.

Press  to confirm your selection.

C	a	l	l		L	o	g												
2	.	R	e	c	e	i	v	e	d										

Use  to scroll to a function and press  to confirm it.

0	4	=	2	8	8	3	7	4	5	6									
1	:	8	:	3	3						2	8	.	1	0	.			

If several entries are available, press  to select the required entry. The caller's phone number is displayed in the first line; the time and the date of the call is displayed in the second line.

Step by Step



M	a	i	n	M	e	n	u								
1	.	C	a	l	l	L	o	g							↓

Displaying Dialed Numbers

Press this key.

Press  to confirm your selection.

C	a	l	l	L	o	g									
3	.	D	i	a	l	e	d	N	o	s	.				↕

Use  to scroll to a function and press  to confirm it.

0	3	=	1	8	8	2	9	3	0	5	4				
1	2	:	0	7				2	8	.	1	0	.		↕

If several entries are available, press  to select the required entry. The dialed phone number is displayed on the first line; the time and the date that the number was dialed is displayed on the second line.

Dialing a Phone Number from the Call Log

You can select an entry in any call log to dial the corresponding phone number. This is illustrated in the following using a missed call as an example.



M	a	i	n	M	e	n	u								
1	.	C	a	l	l	L	o	g							↓

Press this key.

Press  to confirm your selection.

C	a	l	l	L	o	g									
1	.	M	i	s	s	e	d								↓

Press  to confirm your selection.

0	2	=	2	2	2	8	7	5	8	8					
1	0	:	0	4				2	8	.	1	0	.		↕

If several entries are available, press  to select the required entry.



Lift the handset. The number is dialed.

Step by Step

Transferring a Phone Number to the Phone Book

You can select an entry in any call log and transfer the corresponding phone number to the phone book. This is illustrated in the following using a missed call as an example.



Press this key.

M	a	i	n	M	e	n	u												
1	.	C	a	l	l	L	o	g											

Press to confirm your selection.

C	a	l	l	L	o	g													
1	.	M	i	s	s	e	d												

Press to confirm your selection.

0	2	=	2	2	2	8	7	5	8	8									
1	0	:	0	4							2	8	.	1	0	.			

If several entries are available, press to select the required entry. Press to confirm your selection.

0	2	=	2	2	2	8	7	5	8	8									
1	.	S	a	v	e	t	o	D	i	r	.								

Press to confirm your selection.

To complete the process, proceed as described for editing a phone book entry → page 21.

Deleting a Phone Number from the Call Log

You can delete individual entries from call logs. This is illustrated in the following using a missed call as an example.



Press this key.

M	a	i	n	M	e	n	u												
1	.	C	a	l	l	L	o	g											

Press to confirm your selection.

C	a	l	l	L	o	g													
1	.	M	i	s	s	e	d												

Press to confirm your selection.

0	2	=	2	2	2	8	7	5	8	8									
1	0	:	0	4							2	8	.	1	0	.			

If several entries are available, press to select the required entry. Press to confirm your selection.

0	2	=	2	2	2	8	7	5	8	8									
2	.	D	e	l	e	t	e												

Use to scroll to a function and press to confirm it.

Step by Step

Main Menu
1 . C a l l L o g

Call Log
4 . D e l e t e A l l

Delete All
O K ?

Main Menu
2 . V o i c e M a i l

Deleting Entries in All Call Logs

 This function permanently deletes all entries in all call logs.

Press this key.

Press  to confirm your selection.

Use  to scroll to a function and press  to confirm it.

Press  to confirm your selection.

Accessing the Voice Mail

 A voice mail server must be configured for this purpose. If you have any questions or problems, contact the relevant service personnel.

Press this key.

Press  to make a selection.



Lift the handset. The voice mail server is dialed. You can listen to saved voice messages.

Step by Step

Configuration

Configuring Call Forwarding

You can configure call forwarding for the following scenarios:

- no answer (CFNR)
- on busy
- always (unconditional)

You can activate/deactivate forwarding and configure a forwarding destination for each scenario.

The following describes how to configure forwarding on busy. The same procedure is used for both of the other forwarding types.

Activating and Deactivating Forwarding

Main Menu

3 . Forward

Press this key.

Use  to scroll to a function and press  to confirm it.

1 . No Answer

off

The current status of the forwarding type is indicated. For a detailed explanation, see → page 40.

or

2 . On Busy

off

Press  to make a selection. For a detailed explanation, see → page 40.

or

3 . Always

off

Press  to make a selection. For a detailed explanation, see → page 40.

3 . Always

on

Press  to activate unconditional forwarding.

if necessary 

Press this key repeatedly to toggle the options once again.

Step by Step



M	a	i	n	M	e	n	u								
3	.	F	o	r	w	a	r	d							

2	.	F	o	r	w	a	r	d	t	o					
2	2	2	8	7	5	8	8								

E	d	i	t	:											
2	2	2	8	7	5	8	8	_							





M	a	i	n	M	e	n	u								
4	.	D	o	n	'	t	d	i	s	t	u	r	b		

D	o	n	'	t	d	i	s	t	u	r	b				
O	n														

D	o	n	'	t	d	i	s	t	u	r	b				
O	f	f													

if necessary 

Configuring Forwarding Destinations

Example: forwarding on busy

Press this key.

Use  to scroll to the function displayed and press  to confirm it.

Press  to make a selection. If a destination has already been configured for forwarding on busy, this is indicated on the display. Press  to confirm your selection.

The cursor is positioned at the end of the destination number.

Press this key to delete digits.

Enter digits via the keypad.

Confirm to save your changes.

Activating and Deactivating Don't Disturb

Press this key.

Use  to scroll to the function displayed and press  to confirm it.

The current status of this feature is indicated.

Press  to deactivate this feature.

Press this key repeatedly to toggle the options once again.

Step by Step

Main Menu
5. Setup

Setup
1. User Settings

1. Date Format
MM.DD.YY

1. Date Format
Modify?

1. Date Format
YY.MM.DD

or

1. Date Format
DD.MM.YY

if necessary  or 



Configuring Properties

Configuring the Date Format

For a detailed explanation, see → page 42

Press this key.

Use  to scroll to the function displayed and press  to confirm it.

Press  to confirm your selection.

The current format is displayed. A date may be displayed in the following format, for instance: "10.28.05". Press  to confirm your selection.

Press  to confirm your selection.

Press  to make a selection. A date is now displayed in the following format, for example: "05.10.28".

Press  to make a selection. A date is now displayed in the following format, for example: "28.10.05".

Press these keys to switch between the options.

Confirm to save your changes.

For a detailed explanation, see → page 45.

Press this key.

Press  to confirm your selection.

Press  to make a selection. The current format is displayed. The time is displayed in the following format, for example: "02:36pm".

Press .

The time is displayed in the following format, for example: "14:36".

Press these keys to switch between the options.

Confirm to save your changes.

For a detailed explanation, see → page 43.

Press this key.

Use  to scroll to the function displayed and press  to confirm it.

Press to confirm your selection.

Press  to make a selection. The current language is displayed. Press  to confirm your selection.

Press  to confirm your selection.

Press  to make a selection. The language is changed to German.

Step by Step

if necessary  or 



Press these keys to switch between the options.

Confirm to save your changes.

Setting a Country

For a detailed explanation, see → page 41.



Press this key.

M	a	i	n		M	e	n	u									
5	.	S	e	t	u	p											

Use  to scroll to the function displayed and press  to confirm it.

S	e	t	u	p													
1	.	U	s	e	r		S	e	t	t	i	n	g	s			

Press  to confirm your selection.

4	.	C	o	u	n	t	r	y									
G	e	r	m	a	n	y											

Press  to make a selection. The current country is displayed. Press  to confirm your selection.

4	.	C	o	u	n	t	r	y									
M	o	d	i	f	y	?											

Press  to confirm your selection.

4	.	C	o	u	n	t	r	y									
U	S																

Press  to make a selection. The country is set to US.

if necessary  or 



Press these keys to switch to further options.

Confirm to save your changes.

Setting the Ringer

For a detailed explanation, see → page 45



Press this key.

M	a	i	n		M	e	n	u									
5	.	S	e	t	u	p											

Use  to scroll to the function displayed and press  to confirm it.

S	e	t	u	p													
1	.	U	s	e	r		S	e	t	t	i	n	g	s			

Press  to confirm your selection.

5	.	R	i	n	g	e	r										
M	e	l	o	d	y		1										

Press  to make a selection. The current ringer is displayed. Press  to confirm your selection.

Step by Step

5 . R i n g e r
M o d i f y ?

5 . R i n g e r
M e l o d y 1

if necessary  or 



Main Menu
5 . S e t u p

Setup
1 . U s e r S e t t i n g s

6 . V o i c e M a i l
2 2 8 1 0 0 1

Edit :
2 2 8 1 0 0 1 _






Main menu
6 . S t a t u s

1 . M A C A d d r e s s
0 0 9 0 9 6 - 1 1 2 2 3 3

Press  to confirm your selection.

Press  to make a selection. The ringer is set to "Melody 1".

Press these keys to switch between the options.

Confirm to save your changes.

Configuring Voice Mail

Press this key.

Use  to scroll to the function displayed and press  to confirm it.

Press  to confirm your selection.

Press  to make a selection. The current voice mail destination number is displayed. Press  to confirm your selection.

The cursor is positioned at the end of the voice mail destination number.

Press this key to delete digits.

Enter digits via the keypad.

Confirm to save your changes.

Displaying the Current Status

For a detailed explanation, see → page 43.

Press this key.

Use  to scroll to the function displayed and press  to confirm it.

The device's MAC address is displayed.

4 . P h o n e N u m b e r 

0 5 0 9 9 9 1 0 0 1  

Press  to make a selection. The current telephone number is displayed.

Web-Based Management Tool

General Information

optiPoint 150 S is equipped with a Web server, which enables information from the telephone to be mapped to a Web browser on a PC integrated into the LAN (Web-based Management Tool).

 The IP data for the optiPoint 150 S and the PC must be configured correctly for this.

The Wed-based Management Tool contains the following form elements:

home Click this link to obtain information about your optiPoint 150 S, see → page 36.

logout Click this link to access the home page, see → page 35.

Click **Clear** to reset the changes in the current form to the former optiPoint 150 S values.

Click **Save** to incorporate the changes into the current form. This transfers the changes to the optiPoint 150 S.

???Click this button to perform an action (such as, **Confirm, Delete, Edit, Add, Delete All** or **Browse**).

Timer(s): Enter a value in the input field.

ms Select an entry from the list field.

☐ On Select the relevant option radio button.

☒ none Activate a checkbox to enable or disable a function.

Preparatory Steps


Opening the Home Page

To invoke the interface, open a Web browser and enter the following URL:

http://[telephone IP]

Here, [telephone IP] is the IP address of the optiPoint 150 S you want to map.

The home page appears:

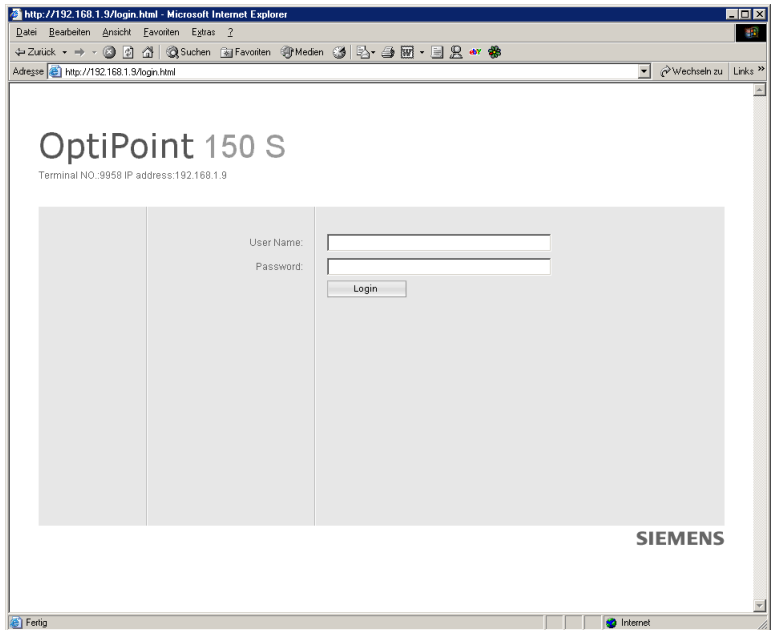

User Setup Dialog

 The user setup dialog must be configured in the system. Contact the service personnel for your user name and password.

Details on configuring a user account and the default values for the administration account can be found in the optiPoint 150 S Administration Manual at:

<http://www.siemens.de/hipath>.

1. Enter your user name for the user setup dialog in the **User Name** field, see → page 46.
2. Enter your user password in the **Password** field, see → page 43.
3. Click **Login**.

Structure

- User Setup → page 37
 - Localization → page 37
 - Call Features → page 37
 - Audio Settings → page 37
- Utilities → page 38
 - Phone Book → page 38
 - Call Logs → page 38
 - Backup Settings → page 39
 - System → page 39

Information

  Click a field in one of the interface images to obtain more information about the field.

Information

System Up Time:	0 days, 0h 50m 47s
NTP Time:	15:29 21/03/2006 (GMT+1) DST
IP Address:	192.168.1.9 (DHCP)
MAC Address:	00:11f5:0c:83:b9
Application Version:	SIP version 1.17 (APP2)
Downloader Version:	1.03
SIP Status:	Success
Phone Number:	9958

User Setup

 Click a field in one of the interface images to obtain more information about the field.

Localization

Country:	Germany
LCD Language:	German
Time Server:	☒ On ☐ Off
Time Server Address:	
Time Zone:	GMT +01:00
Daylight Saving:	☒ On ☐ Off
Date Format:	DD.MM.YY
Time Format:	24 Hours

Call Features

Call Waiting:	☒ On ☐ Off
Call Transfer:	☒ On ☐ Off
3 Way Conference:	☒ On ☐ Off
Call Forward Always:	☐
Call Forward on Busy:	☐
Call Forward No Answer:	☐ Timer(s): 12
Do Not Disturb:	☐ On ☒ Off
Voice Mail	
Set Privacy:	☐
Privacy Level :	☐ none ☐ header ☐ session ☐ critical

Audio Settings

Ringer:	Melody 1
Ringer Volume:	4
Handset Volume:	4
Loudspeaker Volume:	4

Utilities

 Click a field in one of the interface images to obtain more information about the field.

Phone Book

	No.	Name	Phone Number
☐	1	Albert Einstein	01212375688844
☐	2	James T. Chadwick	1999046
☐	3	speaking clock 1	01804100100
☐	4	speaking clock 2	09001001191

Delete

Edit

Add

Delete All Records:

Delete All

Call Logs

☒ Missed Call(s)

☐ Received Call(s)

☐ Dialed Call(s)

	No.	Time/Date	Name	Phone Number
☐	1	11:25 07/24/2006	Albert Einstein	01212375688844
☐	2	11:25 07/24/2006	James T. Chadwick	1999046
☐	3	11:25 07/24/2006		Unknown
☐	4	11:26 07/24/2006	Albert Einstein	01212375688844
☐	5	11:29 07/24/2006	James T. Chadwick	1999046
☐	6	13:04 07/24/2006		Unknown

Delete

Save

Delete All Records:

Delete All

Backup Settings

Backup your Current Settings:	Save
Restore to Previous Settings:	Durchsuchen...
	Confirm
Get PhoneBook Settings:	Save
Start PhoneBook Restore:	Durchsuchen...
	Confirm

System

New User Login ID:	user
New User Password:	
Retype New User Password:	

Parameter Description

This glossary is sorted alphabetically and provides a description of all parameters in your optiPoint 150 S.

There are two ways of configuring your phone:

-  via the phone
-  via the Web-based Management Tool

3-Way Conference

- **On** radio button: Activate this option if you want to convert a consultation call into a three-way conference. This kind of conference is also referred to as "local conferencing".
- **Off** radio button: Activate this option if you want to transfer a consultation call to a colleague.

 → page 18  → page 37

Backup your Current Settings

- You can save your optiPoint 150 S configuration settings (data backup).
- Proceed as follows to back up the data:
 1. Click **Save**.
 2. Select the directory to which the backup should be saved.
 3. Click **Save**.

 → page 39

Call Forward Always

- Activate this checkbox if you want to forward incoming calls immediately to another destination. This is a useful function if you are going to be unavailable for a long period of time (for example, on vacation).
- Enter the phone number to which your calls should be forwarded.

 → page 27  → page 37

Call Forward on Busy

- Activate this checkbox if you want to forward incoming calls while you are on a call. This is a useful function that enables callers to reach a contact person (for example, customer service).
- Enter the phone number to which your calls should be forwarded.

 → page 27  → page 37

Call Forward No Answer

- Activate this checkbox if you want to forward incoming calls to another destination after a certain time has elapsed. This is a useful function if you are unable to accept incoming calls on a regular basis (for example, while participating in meetings).
- Enter the phone number to which your calls should be forwarded.
- Enter the period (in seconds) after which calls should be forwarded.

 → page 27  → page 37

Call Logs

- You can select the following call logs:
 - **Missed Call(s)** radio button: Missed Calls
 - **Received Call(s)** radio button: received calls
 - **Dialed Call(s)** radio button: dialed numbers
- Activate the checkbox for the entry you want to edit.
- You can select the following buttons:
 - **Delete**: Deletes the selected entry.
 - **Save**: Saves the selected entry.
 - **Delete All**: Deletes all entries permanently.

 → page 23  → page 38

Call Transfer

- **On** radio button: Activate this option if you want to transfer a consultation call after announcement.
- **Off** radio button: Activate this option if you want to transfer a consultation call without announcement.

 → page 18  → page 37

Call Waiting

- **On** radio button: Activate this option if you want to accept a second call. The caller hears the on-hook signal, you hear the call waiting signal.
- **Off** radio button: Activate this option if you do not want to accept any other calls while already on a call.

 → page 15  → page 37

Country

- Select the country where you will be operating your optiPoint 150 S from the list.
- You can select the following countries:
 - US
 - Germany
 - France
 - Italy
 - Spain
 - Austria
 - Switzerland
 - Belgium
 - UK
 - Argentina
 - Brazil
 - Luxembourg
 - Netherlands
 - Portugal

 → page 31  → page 37

Date Format

- Select the format in which you want the date to appear on the display.
- You can select the following formats:
 - MM.DD.YY (month.day.year)
 - YY.MM.DD (year.month.day)
 - DD.MM.YY (day.month.year)

 → page 29  → page 37

Daylight Saving

- **On** radio button: Activate this option if you do not want the display to light up.
- **Off** radio button: Activate this option if you want the display to light up when you lift the handset.

 → page 37

Do Not Disturb

- **On** radio button: Activate this option if you do not want incoming calls to be signaled. The calling party then hears a busy signal (the called party is not disturbed). The calling party cannot initiate a callback in this case.
- **Off** radio button: Activate this option if you want to signal incoming calls by the ringer and display.

 → page 28  → page 37

Get PhoneBook Settings

- You can save your phone book (data backup).
- Proceed as follows to back up the data:
 1. Click **Save**.
 2. Select the directory to which the backup should be saved.
 3. Click **Save**.

 → page 39

Handset Volume

- Select the receiving volume value for the handset from the list.
- You can select the following values:
 - 0 (quiet)
 - to
 - 7 (loud)

 → page 14  → page 37

Information

- Displays information on the status of your telephone.
 - **System Up Time:** Show how long your optiPoint 150 S has been operating.
 - **NTP Time:** Displays the SIP server time.
 - **IP Address:** Displays the IP address of your optiPoint 150 S.
 - **MAC Address:** Displays the MAC address of your optiPoint 150 S.
 - **Application Version:** Displays the phone software version. This status contains information on the scope of functions available on your optiPoint 150 S and may change when updating the telephone software.
 - **Downloader Version:** The xxxx/yyyy/zz syntax corresponds to:
 xxxx = boot loader version
 yyyy = application version
 zz = hardware version
 - **SIP Status:** Displays the status of the SIP server connection.
 OK: Success
 Error: Server not responding
 - **Phone Number:** Displays the phone number of your optiPoint 150 S.

 → page 32  → page 36

LCD Language

- Select the display language from the list.
- You can select the following languages:
 - German
 - English

 → page 30  → page 37

SpeakerVolume

- Select the receiving volume value for the loudspeaker from the list.
- You can select the following values:
 - 0 (quiet)
 - to
 - 7 (loud)

 → page 14  → page 37

New User Login ID

- Enter the user name required to access the user setup dialog, see
→ page 35.

 → page 39

New User Password

- Enter your new password in this field.

 → page 39

Password

- Enter your user password for accessing the Web-based Management Tool in this field, see → page 35.

 → page 35

Phone Book

- Activate the checkbox for the phone book you want to edit.
- You can select the following buttons:
 - **Delete**: Deletes an entry from the phone book.
 - **Edit**: Modifies an entry in the phone book.
 - **Add**: Adds an entry to the phone book.
 - **Delete All**: Deletes all entries in the phone book.

 → page 20  → page 38

Privacy level

- **Prerequisite**: The checkbox under "Set PRIVACY" must be activated, see → page 45.
- Activate the appropriate checkbox to select the security level for voice transmission:
 - **None**: No security level.
 - **Header**: High security level.
 - **Session**: Medium security level.
 - **Critical**: Low security level.

This function is not supported by all communication platforms. Contact the service personnel for information on the availability of this function.

 → page 37

Restore to Previous Settings

- This function allows you to restore the original configuration setting (data retrieval).
- **Prerequisite**: A backup of the configuration must be available, see → page 40.
- Proceed as follows to retrieve the data:
 1. Click **Browse**.
 2. Select the backup file from the corresponding directory.
 3. Click **Confirm**.

 → page 39

Retype New User Password

- Re-enter your new user password in this field, see → page 43.

 → page 39

Ringer

- Select the melody for the ring tone for your optiPoint 150 S from this list.
- You can choose from 16 melodies:
 - Melody 1
 - to
 - Melody 16

 → page 31  → page 37

Ringer Volume

- Select a value for the ringer volume for your optiPoint 150 S.
- You can select the following values:
 - 0 (mute)
 - to
 - 7 (loud)

 → page 14  → page 37

Set PRIVACY

- Activate this checkbox to enable a security level, see → page 44.

 → page 37

Start PhoneBook Restore

- This function allows you to load an existing phone book (data retrieval).
- **Prerequisite:** A backup of your phone book data must be available, see → page 42.
- Proceed as follows to retrieve the data:
 1. ???Click **Browse**.
 2. Select the backup file from the corresponding directory.
 3. Click **Confirm**.

 → page 39

Time Format

- Select the time format for the time display from the list.
- You can select the following formats:
 - 12 Hours
 - 24 Hours

 → page 30  → page 37

Time Server

- **On** radio button: Activate this option if a server is available for setting the time (NTP server = **N**etwork **T**ime **P**rotocol server). The IP address of the time server must be entered, see → page 46.
- **Off** radio button: Activate this option if a server is not available for setting the time. The settings for "Time Zone", "Date Format", and "Time Format" must be made by hand.

 → page 37

Time Server Address

- Enter the IP address of the time server here (NTP server = **N**etwork **T**ime **P**rotocol server). The time server must be activated, see → page 46.

 → page 37

Time Zone

- Select the time zone of the country where the telephone is operated in this list.
- You can select the following values:
 - GMT -12:00
 - to
 - GMT +12:00

 → page 37

User Name

- Enter the user name required to access the user setup dialog.

 → page 35

Voice Mail

- Enter the IP address of the voice mail server in this field.

 → page 37

Documentation

A PDF version of this operating manual is available on the Internet at

<http://www.siemens.com/hipath>

A CD-ROM containing HTML and PDF versions is also available (ask your service personnel).

In order to look at and print the operating manual in PDF format, you need a computer on which the free Adobe Acrobat Reader software package is installed.

To display the HTML manual, you need a computer with a Web browser, for example, Microsoft Internet Explorer.

Fixing Problems

Caring for Your Telephone

- Always use a damp or antistatic cloth to clean the telephone. Never use a dry cloth.
- If the handset is heavily soiled, clean it with a diluted surfactant-based neutral cleaner, such as, Pril dishwashing detergent. Afterwards remove all traces of the cleaner with a damp cloth (using water only).
- Do not use alcohol-based or corrosive cleaners or abrasive powders.

Troubleshooting

Pressed key does not respond:

Check whether the key is stuck.

The time displayed is incorrect:

If a time server → page 46 is configured, the time automatically corrects itself at regular intervals.

If a time server is not installed, the Web-Based Management tool → page 34 can be used to correct the time.

To correct any other problem:

First contact your service personnel. If the service personnel are unable to correct the problem, contact Customer Service.

Step by Step

I n i t i a l i z i n g ...

Display Messages

System Start

The telephone is connected to the power supply. Displays information on the initialization of the telephone.

A c q u i r i n g I P ...

The telephone requests an IP number from the DHCP server.

S I P R e g i s t e r i n g ...

The telephone registers at the SIP provider.

R e s t a r t i n g ...

The telephone is restarting.

S o f t w a r e U p g r a d e
3 5 7 8 0 0 5

Software Upgrade

The telephone software is upgrading. A progress bar indicates the remaining data volume (in bytes) to be transferred.

F o r w a r d t o ...
2 2 2 8 7 5 8 8

Forwarding

Unconditional forwarding

Unconditional forwarding is activated. Displays the destination number for unconditional forwarding.

0 8 : 2 8 p m 0 2 . 0 7 . 0 5
3 n e w M e s s a g e s

Voice Mail

Displays the number of new voice messages received in your voice mail.

First line: Time and date.
Second line: Number of new voice messages.

0 8 : 2 8 p m 0 2 . 0 7 . 0 5
2 m i s s e d C a l l s

Missed Calls

Displays the number of missed calls.

First line: Time and date.
Second line: Number of missed calls.

Step by Step

0	8	:	2	8	p	m	0	2	.	0	7	.	0	5					
3	2	3	4	9	3	4	0												

Idle Mode

First line: Time and date.
Second line: User’s own number.

During a Call



User answers the incoming call.
Lift the handset.

2	2	2	8	7	5	8	8												
										0	0	:	1	5					

First line: Phone number (if the phone number is stored in the phone book, the name is displayed).
Second line: Call duration (mm:ss). If the call duration exceeds 59:59, the telephone resets the value to 00:00.

On Busy

B	u	s	y																
2	2	2	8	7	5	8	8												

First line: "Busy" - the line is busy.
Second line: Phone number (if the phone number is stored in the phone book, the name is displayed).

Step by Step

Character Input

Letters and digits are entered by pressing the dial keys an appropriate number of times. This also applies when entering alphanumeric passwords.

Example: "+" = press the  key twice.

Key	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
	[1]	1								
	a	b	c	2	ä					
	d	e	f	3						
	g	h	i	4						
	j	k	l	5						
	m	n	o	6	ö					
	p	q	r	s	7					
	t	u	v	8	ü					
	w	x	y	z	9					
	.	,	0							
	-	+	&	(	)	'	@	:	#	*
	[2]									

- 1) Space.
- 2) Switches between upper case (next letter only), lower case and digit input for alphanumeric character input.

Deleting characters




Press this key to delete characters to the left of the cursor.

Inputting alphanumeric characters

Press  in character input mode (for entering subscriber names, for instance) to switch between different editor modes (see also table above).

The current editor mode is shown in the top right corner of the display. The display can be set to: ">Abc" (upper case), "abc" (lower case) and "123" (digit input).



Step by Step

Contacts in the Case of Problems

If you encounter a disruption that lasts longer than five minutes, for example, contact the relevant service personnel.

Index

A

- Accessing voice mail 26
- Activating the software test display 33
- Adjusting the ring volume 14

C

- Call forwarding
 - activating/deactivating 27
 - configuring a destination 28
 - display 49
- Call log
 - calling back missed calls 16, 24
 - deleting entries
 - dialing a phone number 24
 - displaying dialed numbers 24
 - displaying missed calls 23
 - displaying received calls 23
 - entry
 - deleting** 25
 - transferring to phone book** 25
- Call transfer
 - with announcement 19
 - without announcement 18
- Call waiting 15
- Caring for your telephone 48
- Conference 18
- Configuration
 - country 31
 - date format 29
 - language 30
 - ringer 31
 - time format 30
 - voice mail destination number 32
- Configuring a country 31
- Contact 52

D

- Dialing
 - from the phone book 17
 - manual 12
 - using redial 13

- Dialing the last number dialed 16
- Display
 - call forwarding 49
 - configuring the date format 29
 - configuring the time format 30
 - during a call 50
 - during telephone startup 49
 - idle mode 50
 - while called party is busy 50
- Displaying messages 26
- Displaying the status 32
- Don't disturb
 - activating/deactivating 28

E

- Echo effect 8

F

- Format
 - configuring the date display 29
 - configuring the time display 30

H

- HTML format 47

M

- Making a consultation call (call waiting) 15
- Making calls 12
- Malfunctions 48
- Messages 49
- Microphone, deactivating 11
- Mute 11

N

- NTP (Network Time Protocol) 46

O

- Open listening 11
- Open listening during a call 11
- operating instructions
 - HTML format 47
 - ordering 47
 - PDF format 47

P

PDF format 47

Phone book

- deleting entries
 - all 22
 - individual 22
- dialing from 17
- entry
 - adding 20
 - deleting 22
 - editing existing 21
 - transferring from call log 25

R

Reboot 33

Redialing a number 13

- last phone number dialed 16

Restarting the telephone 33

Ringer, setting 31

S

Setting a language 30

Setting the handset volume 14

Setting the speaker volume 14

Switching the software test display on/off 33

T

Telephone, muting 11

Troubleshooting 48

W

Web-Based Management Tool 34

A

Accessing voice mail 26

Adjusting the ring volume 14

C

Call forwarding

- activating/deactivating 27

configuring a destination 28

display 49

Call log

- calling back missed calls 16, 24
- deleting entries
 - all 26
 - individual 25
- dialing a phone number 24
- displaying dialed numbers 24
- displaying missed calls 23
- displaying received calls 23
- entry
 - deleting 25
 - transferring to phone book 25

Call transfer

- with announcement 19
- without announcement 18

Call waiting 15

Caring for your telephone 48

Conference 18

Configuration

- country 31
- date format 29
- language 30
- ringer 31
- time format 30
- voice mail destination number 32

Configuring a country 31

Contact 52

D

Dialing

- from the phone book 17
- manual 12
- using redial 13

Dialing the last number dialed 16

Display

- call forwarding 49
- configuring the date format 29
- configuring the time format 30
- during a call 50
- during telephone startup 49
- idle mode 50
- while called party is busy 50

Displaying messages 26


Displaying the status 32

Don't disturb

activating/deactivating	28	editing existing	21
		transferring from call log	25
E		R	
Echo effect	8	Redialing a number	13
		last phone number dialed	16
F		Ringer, setting	31
Format		S	
configuring the date display	29	Setting a language	30
configuring the time display	30	Setting the handset volume	14
		Setting the speaker volume	14
H		T	
HTML format	47	Telephone, muting	11
		Troubleshooting	48
M		W	
Making a consultation call (call waiting) .	15	Web-Based Management Tool	34
Making calls	12		
Malfunctions	48		
Messages	49		
Microphone, deactivating	11		
Mute	11		
N			
NTP (Network Time Protocol)	46		
O			
Open listening	11		
Open listening during a call	11		
operating instructions			
HTML format	47		
ordering	47		
PDF format	47		
P			
PDF format	47		
Phone book			
deleting entries			
all	22		
individual	22		
dialing from	17		
entry			
adding	20		
deleting	22		

Menu Functions

Press the "Program/Service" key. Use   and  to select functions. Menu items for administrative settings with password entry are not displayed:

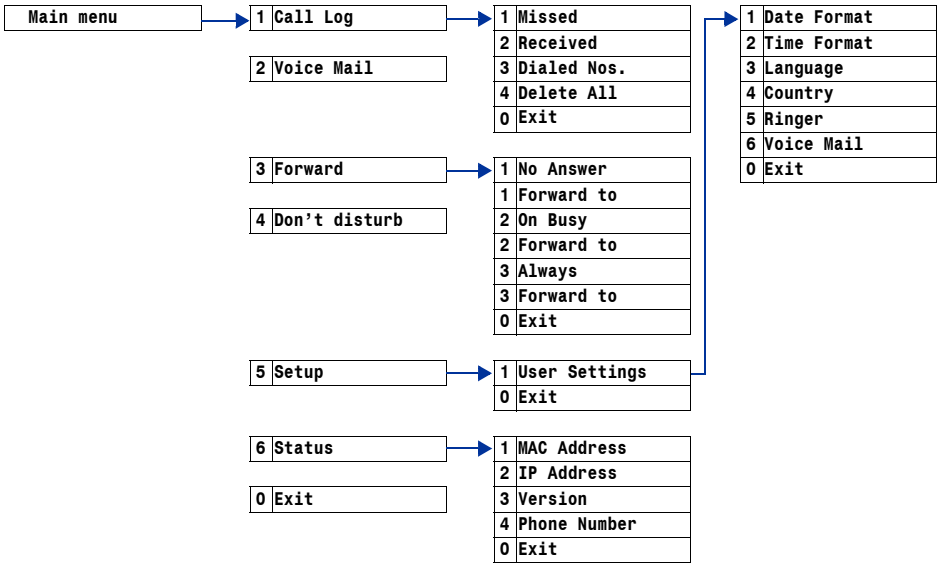

RFC Standards

The following table provides an overview of **RFC** (Request For Comment) standards that are compatible with optiPoint 150 S.

This overview is not exhaustive.

RFC	Description
RFC3261	Session Initiation Protocol (SIP)
RFC2976	The SIP INFO Method
RFC3265	Session Initiation Protocol (SIP) Specific Event Notification
RFC3311	The Session Initiation Protocol (SIP) UPDATE Method
RFC3323	A Privacy Mechanism for the Session Initiation Protocol (SIP)
RFC3428	Session Initiation Protocol (SIP) Extension for Instant Messaging
RFC3515	The Session Initiation Protocol (SIP) Refer Method
RFC3842	A Message Summary and Message Waiting Indication Event Package for the Session Initiation Protocol (SIP)
RFC3262	Reliability of Provisional Responses in the Session Initiation Protocol (SIP)
RFC3665	Session Initiation Protocol (SIP) Basic Call Flow Examples
RFC3489	STUN - Simple Traversal of User Datagram Protocol (UDP) Through Network Address Translators (NATs)
RFC1889	RTP Real Time Protocol
RFC2327	SDP: Session Description Protocol
RFC3264	An Offer/Answer Model with Session Description Protocol (SDP)
RFC2833	RTP Payload for DTMF Digits, Telephony Tones and Telephony Signals
RFC3389	Real Time Transport Protocol (RTP) Payload for Comfort Noise (CN)
RFC3550	RTP A Transport Protocol for Real Time Applications
RFC3551	RTP Profile for Audio and Video Conferences with Minimal Control
RFC3555	MIME Type Registration of RTP Payload Formats

www.siemens.com/hipath



The information provided in this document contains merely general descriptions or characteristics of performance which in case of actual use do not always apply as described or which may change as a result of further development of the products.

An obligation to provide the respective characteristics shall only exist if expressly agreed in the terms of contract

The trademarks used are owned by Siemens AG or their respective owners.

© Siemens AG 2005
Siemens Communications
Hofmannstr. 51 • D-81359 Munich, Germany

Reference no.: A31003-A2056-L154-2-7619

Subject to availability. Right of modification reserved.
Printed in the Federal Republic of Germany.
29.08.06